


# HASTINGS & ST LEONARDS COUNTRY DANCE CLUB EQUIPMENT SETUP

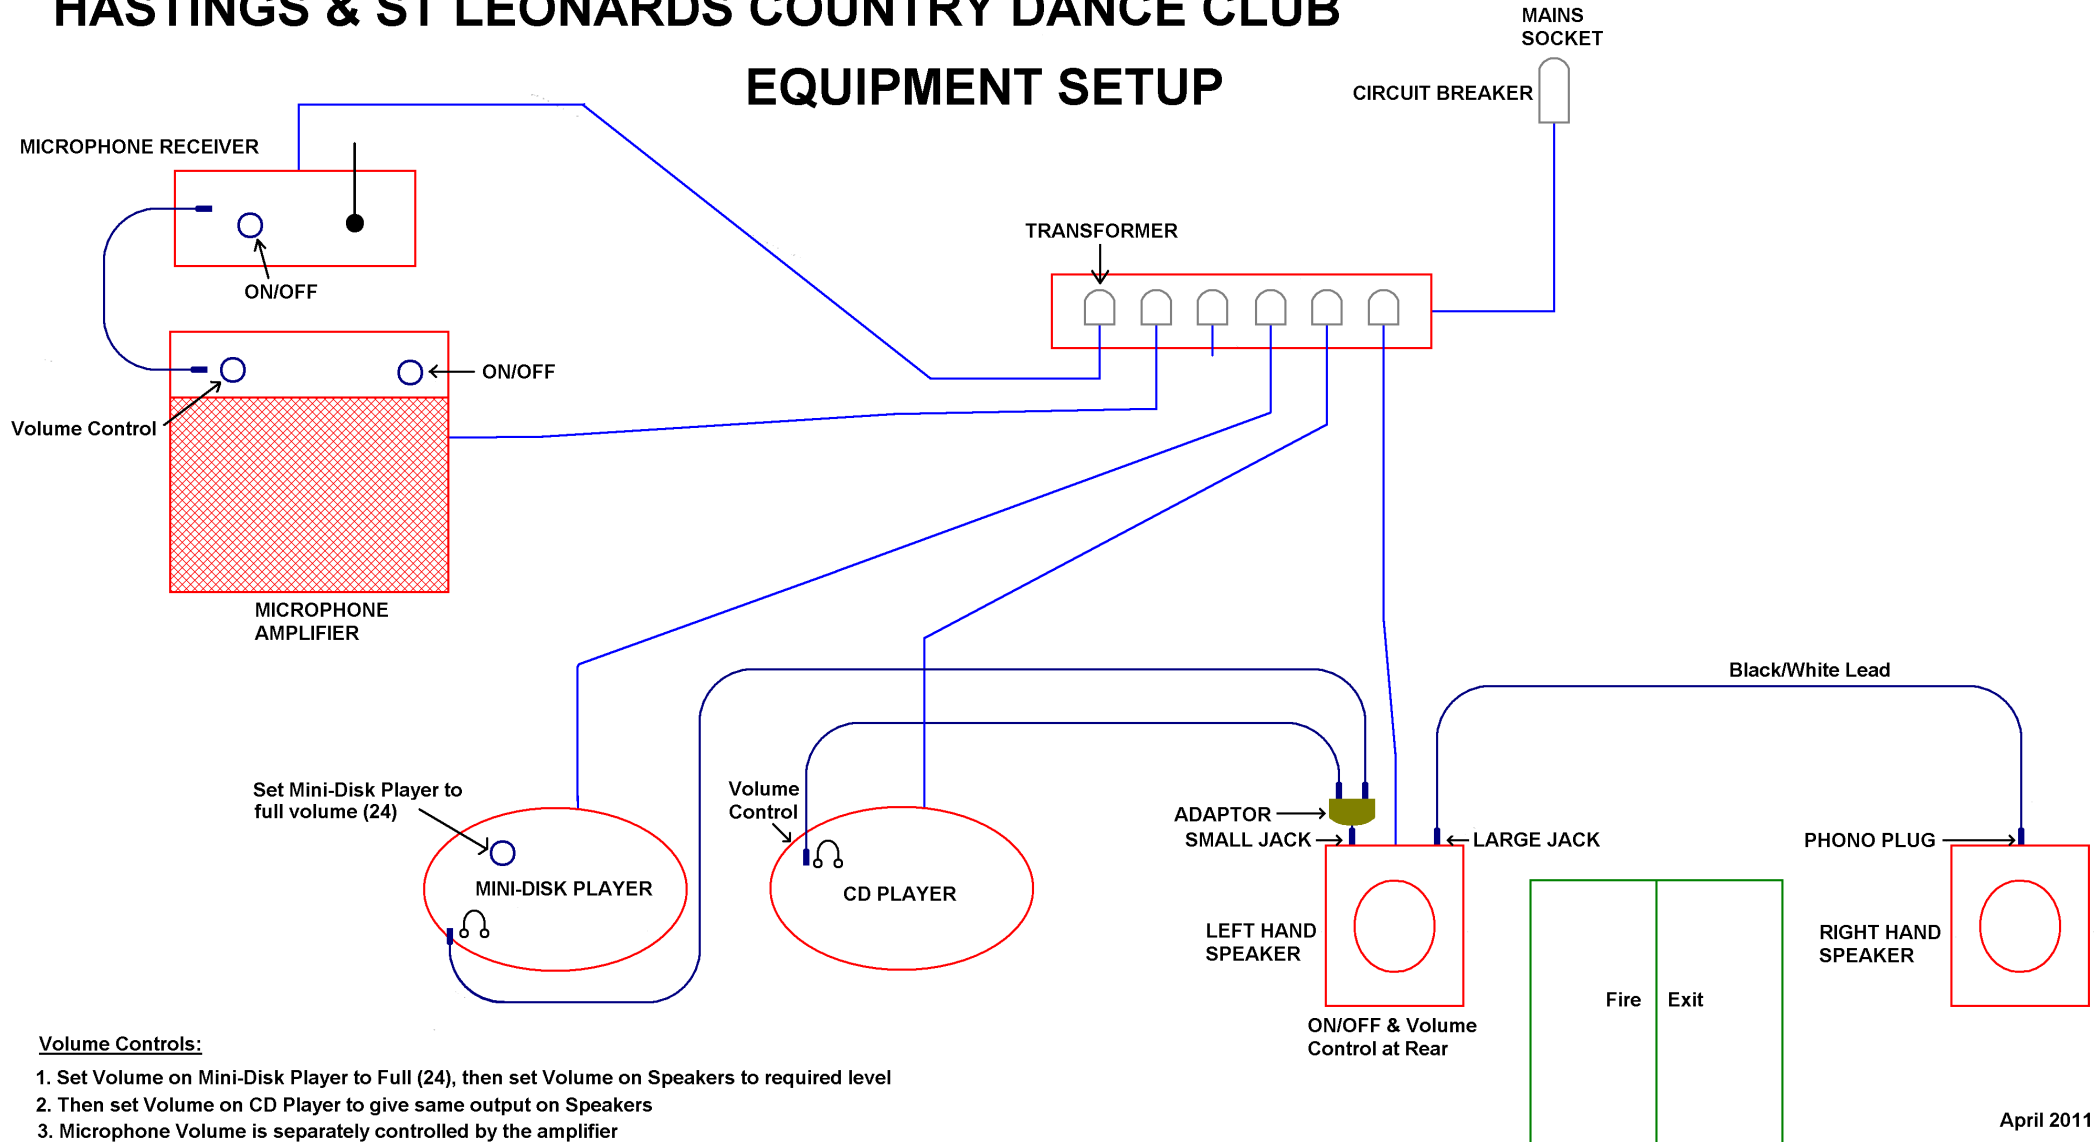

**Volume Controls:**

1. Set Volume on Mini-Disk Player to Full (24), then set Volume on Speakers to required level
2. Then set Volume on CD Player to give same output on Speakers
3. Microphone Volume is separately controlled by the amplifier